Baseline: 5/19/98 Extracted from RTM Home Page

CCR: 98-0724A

LEVEL_4	Add New Level PARAGRAP	OBJECT_	RELEASE	TEXT	CLARIFICA	REQ_TYPE	REQ_STATUS	VERIFICATION_	VERIFICATION_	CCR
	H_ID	ID			TION			METHOD	STATUS	
ADD	F-CMS-11375		<u>B</u>	The FOS shall	Load size is	functional	approved	<u>demo</u>	unverified	
				provide the	the number of					
				capability to ingest	16-bit words					
				a load header file	in the load.					
				which contains the	The owner					
				required AM1	<u>field</u>					
				<u>instrument</u>	identifies that					
				microprocessor load	the user has					
				initiate command	authority to					
				parameters	generate the					
				including start	<u>load initiate</u>					
				address of the load,	command					
				<u>load size</u> , command	(FOT, MISR,					
				mnemonic for the	MOP, AST,					
				<u>load initiate</u>	MODIS,					
				command, load	CEA, CEF).					
				initiate command	<u>Load</u>					
				submnemonics, the	destination					
				owner of the load,	(MODIS,					
				the uplink window	MOPITT,					
				start date/time, the	MISR,					
				uplink window stop	CERES) is					
				date/time, and the	used to derive					
				<u>load destination.</u>	the remote					
					terminal ID					
					for the load					
					initiate					
100	F C) (C) 11207		-	FI FOG 1 11	command.	C	1	,		
ADD	<u>F-CMS-11385</u>		<u>B</u>	The FOS shall	Load size is	<u>functional</u>	approved	<u>demo</u>	unverified	
				provide the	the number of					
				capability to ingest	16-bit words					
				a load header file	in the load.					
				which contains the	The owner					
				required AM1 flight						
				software load	identifies that the user has					
				initiate command						
				parameters	authority to					
				including start address of the load,	generate the load initiate					
				<u>load size</u> , <u>command</u>	<u>command</u>					

Page 2

CCR: 98-0724A Baseline: 5/19/98 Extracted from RTM Home Page Page 3

LEVEL_4	PARAGRAP	OBJECT_	RELEASE	TEXT	CLARIFICA	REQ_TYPE	REQ_STATUS	VERIFICATION_	VERIFICATION_	CCR
	H_ID	ID			TION			METHOD	STATUS	
				mnemonic for the	(FOT). Load					
				<u>load initiate</u>	destination					
				command, load	(CTIU1,					
				initiate command	SCC1,					
				submnemonics, the	SCC2,					
				owner of the load,	SSST1,					
				the uplink window	SSST2) is					
				stop date/time, and	used to derive					
				the load destination.	the remote					
					terminal ID					
					for the load					
					<u>initiate</u>					
					command.					
EOT										

Table 2: Add RBR to Level 4 Link

RELEASE_TO_L	PARAGRAPH_ID	PARAGRAPH_ID
4		
LINK	EOC-3015#B	F-CMS-11385
LINK	EOC-3020#B	F-CMS-11375
EOT		